

USERS INSTRUCTION MANUAL

SCARECROW B.I.R.D. SYSTEM™



Patent Number 2531059

ISSUE = V20619

A Trading Division of Scarecrow Group Limited

Trading & R/O Address: The Old Dairy, Straight Half Mile, Maresfield, East Sussex, TN22 2HH England

Telephone: +44(0) 1825 766363

E-mail: sales@scarecrow.eu Website: www.scarecrow.eu

Registered in England no. 01568506 VAT Registration no. Gb680 0269 46

CONTENTS

- Page 1-2 - Items Supplied and Available Accessories**
- Pages 2-4 - Practical Setup Tips**
- Page 5 - Assembly / Fixing**
- Pages 6-8 - Power Supply and Connections**
- Page 8-9 - System Design**
- Page 10 - Keypad Guide and Default Settings**
- Page 11 - Turning the Unit On/Off**
- Pages 12-14 - Programming Instructions**
- Pages 14-15 - Other Features**
- Page 16-17 - Pin Control / Use**
- Page 17 - Re-Set Default Factory Settings and Option Settings**
- Page 18 - Error Code / LED**
- Page 19 - Technical Support**

ITEMS SUPPLIED

SCARECROW B.I.R.D. SYSTEM™

A fully automatic and random play bird dispersal system, incorporating:

- Random play bird dispersal processor
- 10 standard distress calls
- Integrated Long Line Transformer
- Built in keypad for setting controls
- Built in light sensor
- Capable of hosting up to 30 loudspeakers (SEE BELOW).
- Power Supply; 15V dc regulated switch mode; choice of EU/UK plug top
- 4 x 1215/L Loudspeakers - IP65 rated 20 watt re-entrant horn loudspeaker, fitted with fully adjustable mounting bracket.
- 3 x Speaker Connectors

Standard calls: Herring Gull, Black Headed Gull, Starling, Rook, Crow, Pigeon, Jackdaw, Canada Goose 1, Canada Goose 2 and Birds of Prey

ADDITIONAL LOUDSPEAKERS: OPTIONS

- 1212/L LOUDSPEAKER; IP65 rated 10 watt re-entrant horn loudspeaker fitted with fully adjustable mounting bracket. Used where a more specific “directional” broadcast is required.



- 1215/L LOUDSPEAKER; IP65 rated 20 watt re-entrant horn loudspeaker, fitted with fully adjustable mounting bracket.



Note: The 1220/L LOUDSPEAKER Class 1 'EexmN' is for use in hazardous atmospheres, and more detail is provided in the appropriate manual.

If the Scarecrow B.I.R.D. System™ processor unit can be situated in a safe environment, but the 1220/L speakers are required in view of the site environment, then the 4 x 1212L/1215L speakers provided as standard with the normal Scarecrow B.I.R.D. System™ price will be upgraded to 1220L speakers, subject to the appropriate additional payment.

ACCESSORY ITEMS AVAILABLE

Solar Power Option; suitable for B.I.R.D. System™, Scarecrow 180™ and Scarecrow 360™ System. System comprises:

- Solar Panel– Pole mount only
- Battery & regulator pack - Option for wall or pole mounting

Ambient Light Sensor; to facilitate Dawn / Dusk function only when main Scarecrow B.I.R.D. System™ processor (with built in light sensor) has to be located indoors.

Should the above accessories be required please contact your supplier, or Scarecrow direct, on sales@scarecrow.eu

PRACTICAL TIPS

Point of Broadcast

- Ideally, the point of broadcast should be from a high point – too low to the ground will only limit the area covered, and therefore the success obtained.

Volume Levels

- The volume of broadcast has to be at a natural level for the birds to identify the broadcast as a natural call:
 - Too loud – the broadcast will merely appear to sound like a noise, and no reaction is likely.
 - Too quiet =- they simply will not hear the call, and again a dispersal reaction is unlikely.
- To attain what is perceived as a natural level for the target species, begin broadcasting the system at the lowest volume level and then increase the volume until you see the birds react to the call

PRACTICAL TIPS (Cont.)

Coverage

- Total coverage the system is able to provide is dependent on many factors, not least of which is the number of speakers utilised. Under normal circumstances we would not look to design a system where any speaker(s) are required to broadcast in excess of 100m distance.
- Other dependent factors would include the lie of the land, prevailing weather conditions, strength/direction of wind, other ambient noise, air temperature, shape/design of target area and obstructions to sound broadcast.
- Taking this into account, it is important to remember that the broadcast needs to sound at a natural level to the birds for greatest effect – too loud or too quiet, will merely either sound like a noise to the target birds and be ignored, or not heard at all.

Effect on other wildlife

- The broadcasted calls are only recognisable by the target bird species, and therefore has no lasting effect on other wildlife at all.
- That is not to say that there will be no reaction – in some extreme cases, the broadcast of a distress call may for example bring in a Hawk hoping to find some easy food.

Relocating the Scarecrow B.I.R.D. System

- Under normal circumstances due to the cable runs with the Scarecrow B.I.R.D. System™, once speakers are in place they are left where they are.
- Whilst “speaker relocation” is an option, it is recommended that a system should ideally remain in situ if an area is required to be kept free of birds; nevertheless, speakers can be repositioned if required.
- The concept of the system is to create the impression over time that the area is a “threat area” and one therefore to avoid – so over time the bird numbers may even reduce. This is achieved by the regular (but not too frequent) broadcast of the Distress Call, which clearly cannot be achieved if the system is relocated to alternative areas.

Variable Volume

- The system incorporates a “variable volume” feature –during broadcast the volume will automatically vary between the maximum set level, and approximately 20 metres from the unit.
- This is to provide the perception of predator movement, to aid to the overall confusion and concern of the target specie, to improve dispersal performance.
- This feature also ensures that no matter where the target bird may be within the overall coverage area during the time of broadcast, at some point the broadcast sound level will certainly sound as if it is at a natural level.
- This function can be disabled so the unit will continually broadcast at the maximum set level (please refer to page 17)

Independent Speaker Channel broadcast

- The system incorporates three independent speaker channels.
- Each speaker channel can accommodate up to a maximum of 10 speakers. The system uses a 30w amplifier and therefore speakers need to be tapped down according to the number of speakers (e.g. tapped down to 2.5w if the maximum 10 speakers are being used per channel) - the speaker channels do not broadcast at the same time so 30w per channel is acceptable.
- The broadcast is made out of each channel in turn, independently, and on a randomised basis.
- As with the variable volume, this is to provide the perception of predator movement, to aid to the overall confusion and concern of the target specie, to improve dispersal performance.
- This feature works in conjunction with the variable volume.
- Different volume levels can be set for each speaker channel (please refer to page 13)
- In the event of a system design requiring say only 8 speakers, the choice exists to:
 - Use just one channel with all 8 speakers – in this instance all speakers will broadcast at the same time, thus mitigating the effect of “predator movement” by way of the sound sweeping from one set of speakers to another.
 - Use 2 channels with say 4 speakers in each channel – in this instance the two sets of 4 speakers will broadcast one after the other – so some “predator movement” effect is obtained.
 - Use 3 channels with a split of speakers across the 3 channels –in this instance the full effect of “predator movement” is obtained.

Note: The decision as to which option to follow may be driven by other factors such as installation costing.

Habitat Management

- Whilst the unique efficiency of SCARECROW bio-acoustic products is long established SCARECROW BIO-ACOUSTIC SYSTEMS LIMITED stress that they can only work effectively as part of an overall and planned programme of bird control.
- This will include total hygiene management and where applicable the use of operatives who have been professionally trained.
- Without limitation, SCARECROW BIO-ACOUSTIC SYSTEMS LIMITED will not accept liability for any consequences as a result of poor equipment maintenance, misuse, inappropriate use, lack of operative training, failure of due diligence or through lack of prior project consultation.

ASSEMBLY / FIXING

- The Scarecrow B.I.R.D System™ main processor box is typically a traditional wall fixing using screws/raw plugs (not supplied).
- Fixing can be either inside or outside depending on client needs and site circumstances.
- Ideally the processor should not be positioned too far away from the speaker locations – this is merely to facilitate ease of installation; if circumstances dictate this is not possible, consideration then needs to be given to cable choice used (see below).
- With the Scarecrow B.I.R.D. System™, speaker placement is vitally important to obtain the desired dispersal effect over the target area – please see Pages 8-9 under “System Design”.
- The speakers used have fully adjustable mounting brackets (see Page 1) typically fixed to position with screws/raw plugs (not supplied).
- The processor box has three separate speaker channels, each of which can take up to a maximum of 10 speakers each. The speaker channel connections are shown below:



- Cabling for speakers is on a “Daisy Chain” basis between speakers, starting from the processor box.
- Please see Page 4 under “Independent Speaker Channel Broadcast” to determine how many speaker channels you wish to utilise prior to commencing speaker cabling.
- In terms of cable choice used on site, the following guidelines should be considered:

FLEXIBLE	DISTANCE IN METRES
2.50mm ²	200-300
1.50mm ²	120
1.00mm ²	75

POWER SUPPLY AND CONNECTIONS

SCARECROW B.I.R.D. SYSTEM™

- The standard system requires just one cable connection, as supplied. One end of the cable connection is fixed to the side of the Scarecrow B.I.R.D. System™ in the “Power Input” connection.



The other end is the choice made of either 15V DC regulated switch mode EU/UK power supply, or Battery Lead, and is fixed to power source.



LIGHT SENSOR

If the main processor box is fitted inside a building, then the built in Light Sensor will not function as it should. If the remote Ambient Light Sensor is purchased, the cable fixing is made to the main processor UNIT as shown above

SOLAR POWER OPTION

The solar power unit is a standalone unit and has two connectors.

The first is “Solar”, connecting the solar panel to the battery and regulator.

The second is “12V Out”, connecting the battery and regulator to the main Scarecrow B.I.R.D. System™ unit, at “Power Input”.



Further instructions on the assembly of the Solar Pack are included with these accessories.

SPEAKER CONNECTION

Each system contains 4 speakers as standard and 3 black connectors; these connectors need to be wired to the end of the speaker to enable them to be plugged into the main processor speaker channels.

As described on page 4 the system has an “Independent Speaker Channel function” so you will need to establish how many speakers will be wired into each connector beforehand.

If only two speakers are being wired per channel both can go into the same connector, however we recommend if using more than 2 speakers per channel the speakers are “daisy chained” together.

- Place one of the speaker channel sealing caps onto the interlocking ring of the speaker connector and turn it anti-clockwise as shown below



- Once you have removed the ring you will have three parts



- Thread the speaker cable(s) through the connector body and then connect them to the two screw terminal as follows:

Blue = Neutral

Brown = Live

- Once completed replace the interlocking ring and tighten it back up again

SYSTEM DESIGN

System Design is really all about speaker placement to take into account such factors as the following:

- Sound broadcast over the entire target area, including dealing with any barriers to sound (e.g. walls, alcoves), where feasible within constraints of budget.

Some sites have so many barriers to sound, or so many “nooks and crannies” to protect, it becomes commercially impractical to provide a system likely to provide 100% coverage.

- Each speaker ideally broadcasting over much the same distance.

The main processor box is where the system volume is set, and as explained later, the setting of the “maximum volume broadcast”. If you have some speakers that are required to broadcast over say 40m, whilst others have to broadcast over 100m, independent speaker channel levels will need to be set

- Other ambient noise factors that may impact on broadcast.

SYSTEM DESIGN (cont)

If there are strong, and regular/frequent ambient noise features, these may be taken into account in terms of speaker placement and broadcast direction to ensure the normal sound broadcast is not mitigated by virtue of the ambient noise.

- Strong prevailing weather conditions.

Where feasible it is a good idea to maximize the benefit of regular/frequent prevailing winds, to use these to enhance the distance that sound will naturally travel. If not considered, the converse could apply that the wind could reduce the distance that the dispersal sound will travel, by blowing in the opposite direction to that which the loudspeakers are directed.

- Impact of broadcast on any neighbouring properties, to mitigate the risk of any “noise complaints”.

The broadcast should be set at a “natural level” for the birds to react, so should, in theory, be no different to if a bird were present anyway. However it is always best, if possible, to set the broadcast direction away from any nearby residential areas, or areas where the regular broadcast may have an impact.

- Ensuring speakers are angled slightly downward to ensure no collection of water within the horn.


Whilst all the speakers Scarecrow use are rated IP65, it is best to have speakers angled very slightly downwards to prevent the risk of water collection.

- The target bird species natural reaction to hearing their Distress Call

Typically the ideal speaker placement is to be at the “highest possible point” – if this is on a roof it may be by using the pitch of the roof, or it may be the speakers need to be pole mounted to provide that extra elevation.

If the problem is an internal one, then ideally the speaker location needs to be as close to the roof void / ceiling as possible – if not, dispersal success may vary dependent on target species.

KEY PAD GUIDE AND DEFAULT SETTINGS

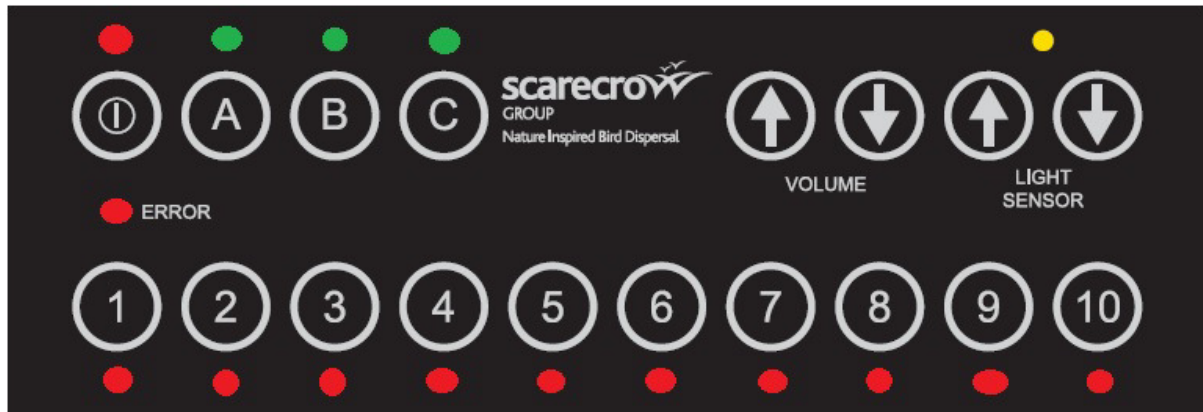

Standard Programmed Calls:

- | | |
|----------------------|-------------------|
| 1. Herring Gull | 6. Pigeon |
| 2. Black Headed Gull | 7. Jackdaw |
| 3. Starling | 8. Canada Goose 1 |
| 4. Rook | 9. Canada Goose 2 |
| 5. Crow | 10. Birds of Prey |

Standard Factory Settings:

- Unit volume is pre-set to cover a 50m distance
- Pin Disabled
- Light Sensor – Mid Point 5
- Random Broadcast Playback Timer set to Average
- Variable Volume activated
- Independent Speaker Channel volume deactivated
- Low Power Standby enabled

When the unit is first provided from Scarecrow, the system will not have the PIN activated. In this “unlocked state” all buttons on the keypad are operative.

Thereafter, if the User has activated the PIN, the system can be either be in a locked state or unlocked when first powered up.

If locked, a PIN number is required to unlock the system and perform any functions.

TURNING THE UNIT ON/OFF

Turn on the system.

- Press the 'POWER' button to switch on.
- The red LED above the power button will turn on.
- If a PIN is enabled, LED's 1-4 will flash to prompt you to enter the PIN code for access
- Enter the correct PIN number, if correct all number LED's will flash twice, if incorrect Error code 2 (Refer to pages 18 for Error Codes) will be shown on the ERROR LED and the system will shut down
- The system will also shut down after 30 seconds if no PIN is entered.

Turn off system.

- Press and hold the power button for 3 seconds until all number LED's flash rapidly to switch off.
- If the system was in low power standby, the system will power up first, flash all number LED's rapidly then shut-down when the power button is released.
- If a PIN is enabled, LED's 1-4 will flash indicating that the system is locked.
- Enter the correct PIN number, if PIN entered is correct, the system will shut down immediately.
- The system will remain on if the incorrect Pin was entered.
- If the system was in low power standby, the system will power up first, flash LED's 1 – 4 to prompt for the PIN entry.

Lock the system.

- If PIN enabled and the system is unlocked, press the power button briefly to lock the system, all number LED's will flash and the system will be locked.

Note:

The system will lock itself after 15 minutes if no keys are pressed and the PIN is set and enabled.

Unlock the system.

- Assuming the unit is on, press and hold 'A' for 3 seconds and LED's 1-4 will flash to prompt PIN entry.
- Enter the correct PIN number which will be confirmed by all the number LED's flashing twice. Incorrect pin will be indicated by all number LED's lighting for two seconds and Error code 2 on the ERROR LED (Refer to pages 18 for Error Codes)

Cancel PIN entry mode.

- Briefly press the Power button to exit PIN entry mode while LED's 1 – 4 are flashing.

PROGRAMMING INSTRUCTIONS

Broadcast Random Timer

- The system has three main random timer functions that indicate how long the interval will be between each call sequence broadcast. The System is automatically pre-set to “Average” mode – amend to “Boost” or “Critical” as required by pressing the appropriate button briefly and LED comes on, and “ Average” LED goes out – function mode amended.
- A = Average = 20 to 45 minutes – This is the default setting and recommended everyday setting
- B = Boost = 10 to 30 minutes – This setting should not be used for more than 48hrs otherwise the birds may habituate to the sound and make the system less effective
- C = Critical = 5 to 15 minutes - This setting should not be used for more than 48hrs otherwise the birds may habituate to the sound and make the system less effective

Bird Calls

- Press 1-10 for the required Bird Calls.
- Press individual numbers one at a time and once the individual LED stays on, the call is programmed.
- In the event the wrong call is programmed, simply press the number again until the LED goes off.

Setting the Volume – Single Channel Mode (Default)

- The volume is set to 50m, as a factory setting default.
- Press either volume button up or down to enter the volume set mode. Speaker channel ‘B’ will be pre-selected as indicated by a flashing ‘B’ LED and solid lit ‘A’ and ‘C’. Press volume up or down to alter the volume/distance coverage as required – very roughly, each number equates to about 10 metres.
- On pressing either volume button, the bird sequence will start broadcasting continuously in a “Test Mode” at the current set maximum level (i.e. the variable volume feature will not operate at this stage). This will last for 2mins to enable you to check the volume level is adequate for the required target area and then, after 2 minutes, automatically time out. If the process is completed sooner, briefly press the power button to exit the “Test” mode and the final volume setting made will be the maximum level to which the system will broadcast.
- While the volume key is pressed and for a few seconds after, the number LED’s will show the volume setting from 1 to 10.
- You may select either of the three speaker channels A, B or C
- To override the 2 minute test mode and activate the random timer for broadcast, once the volume is set at the correct level, briefly press the power button

PROGRAMMING INSTRUCTIONS CONT.

Setting the Volume – Multi Channel Mode (Option Setting 6)

- If activated in the Options Settings (refer to page 15) you are able to set an individual volume level for each speaker channel
- Press either volume button up or down to enter the volume set mode. Speaker channel LED's 'A', 'B' and 'C' will flash prompting you to select a speaker channel.
- Press either 'A', 'B' or 'C' to select the speaker channel; the selected channel LED will be flashing with the other two remaining solid. The current volume level will be shown briefly on the number LED's and the bird sequence will start broadcasting.
- Press the volume button up or down to adjust the level – very roughly, each number equates to about 10 metres.
- Once you have completed setting the volume level for the selected channel you can switch to one of the other channels by pressing either the 'A', 'B' or 'C' buttons. The current volume level for the new selected channel will be shown briefly on the number LED's.
- Once the volume is set at the correct level for each channel, briefly pressing the power button will exit the volume set mode

Light Sensor

- The light sensor tells the system to stop broadcasting at night to save power and to reduce noise nuisance.
- The DUSK timer runs for 1 hour at sunset to keep the system active after sunset to discourage birds from roosting.
- The DAWN timer delays wakeup of the system for 60 seconds to ensure that the system is not triggered by passing motor vehicle headlights at night.

Light Sensor: Test

- Briefly press one of the light sensor buttons to disable the dawn / dusk timers.
- Cover the light sensor (positioned on left hand side of speaker below keypad) with hand - the Amber LED should go out indicating the system is in night mode.
- Remove your hand and check the LED now goes to a solid Amber colour – this indicates the system is now in day mode and the light sensor is working correctly.
- During normal operation, the light sensor LED will be on during daylight, it will flash when dawn or dusk timer is running and will blink once every 5 seconds if in night mode (to save power).

PROGRAMMING INSTRUCTIONS CONT.

Light Sensor: Adjustment

- Adjust Light Sensor by pressing the associated “up/down” buttons repeatedly as required; 1 = most sensitive to light, 10 = least sensitive.
- The light sensor level will be shown on the number LEDs while operating the buttons and for a few seconds after release.
- Minimum setting disables the light sensor. This is achieved by adjusting the light sensor down until LED No 1 also goes out - this is confirmed by rapid flashing of all number LED’s.

Light Sensor: Other

- Pressing the UP or DOWN buttons briefly will bypass the dawn and dusk timers when in "Dawn/Dusk" Timer mode (e.g. amberLED is flashing). This allows the system to go into night mode immediately if dark, or day mode if daylight, without the delay.
- During normal operation, the light sensor LED will be on during daylight, it will flash when dawn or dusk timer is running and will blink once every 5 seconds if in night mode (to save power).

Light Sensor: Typical Results

- The light sensor function enables the unit to be set up so it activates at dawn and then goes into night mode at dusk. Below is an overview of the basic results seen during test on a partially cloudy day.
 - Level 0 = Disabled, unit always in day mode.
 - Level 1 = Unit deactivates 20 minutes after sunset
 - Level 2 = Units deactivates 15 minutes after sunset
 - Level 3 = Units deactivates 6 minutes after sunset
 - Level 4 = Units deactivates 2 minutes after sunset
 - Level 5 = Units deactivates 1 minute after sunset
 - Level 6 = Units deactivates at sunset
 - Level 7 = Units deactivates 1 minute before sunset
 - Level 8 = Units deactivates 2 minutes before sunset
 - Level 9 = Units deactivates 5 minutes before sunset
 - Level 10 = Units deactivates 6 minutes before sunset

Note: the system will continue broadcasting for a further 60 minutes after the times stated below, as the dusktimer keeps the system active to prevent roosting.

Note: There is a slight delay before the sensor responds.

Note: If the light sensor is NOT enabled in the options function, all number LED’s will flash rapidly when either button is pressed. It is enabled by default.

OTHER FEATURES

Low battery warning

- If the battery voltage falls below 9.5v, the system will shutdown to prevent damage to the battery.
- The next time the unit is powered up (provided the battery remained connected and did not fall below 5v) the system will flash code 5 and play “low battery” through the speakers indicating that a low battery shutdown had occurred.
- You must recharge the battery.

Battery Consumption

Assuming 5 birds programmed on average mode and volume set to mid output (8). Each bird will play for an average of 80 seconds per speaker channel which totals 20 minutes. The unit will be timing for an average of 30 minutes between broadcasts. (20 – 40 minutes for average mode)

Therefore the total draw in 24 hours will = 1.632Ahr (1.63 Amp hours drawn per 24 hours)

Battery life expectancy assuming a fully charged battery:

6.5Ahr	6.5 / 1.63	= 4 days
40Ahr	40 / 1.63	= 24.5 days
72Ahr	72 / 1.63	= 44 days
80Ahr	80 / 1.63	= 49 days

Low Standby Mode

- The system will go into a low power standby mode (if enabled) and no broadcast is running.
- As standard each unit has low power standby mode activated.
- The system will go into this mode if no buttons have been pressed for 15minutes, no broadcast sequence is active during daylight and one hour after sunset has been detected.
- A brief press of the power button will bring the system out of this mode.
- Low standby mode is indicated by a brief flash of the light sensor LED during night time or a brief flash of the set mode (A, B or C) during day time.
- To force low power standby to run, press ‘A’, ‘B’ or ‘C’ button to stop the current broadcast then press power button briefly, after 10 seconds the system should power down into low power mode.
- Low power mode is indicated by a brief flash of the power LED, the light sensor led (if night) or either the ‘A’, ‘B’ or ‘C’ led’s if daytime.

LED meanings

- All number LED’s flash four times when any button pressed and ERROR LED lit = System locked by PIN, press A for 3 seconds then enter PIN number.
- Number LED’s 1-4 flashing continuously => PIN number entry expected.

OTHER FEATURES CONT.

- All number LED's flash twice after PIN entry = PIN number entry correct.
- All number LED's on for 4 seconds = PIN number incorrect or timeout ERROR. Error code 2 shown on ERROR LED
- All number LED's scroll down from 10 to 1 after factory reset = Confirmation of reset to defaults.
- A,B or C LED flashing indicates that the random timer between broadcasts is running.
- A single number LED flashing indicates that particular bird is broadcasting.

PIN CONTROL / USE

- PIN option factory setting is set to "Disabled" as default.
- Default PIN : 10, 10, 10, 10

Activate PIN Function and Save New Pin (use when PIN Function not activated before)

- Press and Hold A for 3 seconds – Red LED's 1- 4 will now flash
- Enter the default PIN 10,10,10,10 – The A,B and C Green LED's will now flash
- Press C briefly and then enter new 4 digit PIN twice – All LED's will flash twice to confirm change. The PIN is now saved and enabled.

Disable PIN function

- Press and hold A for 3 seconds - Red LED's 1- 4 will now flash
- Enter the current user PIN or 10,10,10,10 if default - then press B to disable the PIN.
- The system will now not require a PIN to operate.

Enable a previously disabled PIN

- Press and hold A for 3 seconds, enter the existing user PIN number
- Press A briefly. The system will now require the user PIN to operate.

Note: After A, B or C has been pressed as above, the system reverts to normal operation mode.

PIN number features:

- If the system is locked by PIN, hold "A" for 3 seconds - LED's 1-4 flash continually (these LED's flashing indicates "PIN entry mode").
- If no PIN has been programmed yet, enter factory setting default PIN 10,10,10,10. Otherwise enter the saved PIN.
- LED's 1-4 will go out as you enter each digit.
- You should then see all LED's flash twice for confirmation of correct entry. System now unlocked. (Wrong entry indicated by all lights lit for 2 seconds and Error Code 2 on ERROR LED)

PIN CONTROL / USE CONT.

- If the PIN is active and after 15 minutes of no user input, the system will revert to PIN locked in which case you will have to press A for 3 seconds and then enter the PIN number to unlock the system.
- If the PIN is entered incorrectly 5 times in a row the buttons will be locked out for 5 minutes before a retry is allowed. All the number LEDs will light for 2 seconds if A is pressed for 3 seconds to try and enter a PIN number during lockout period.
- Briefly pressing the power button will lock the system if the PIN is enabled.

RE-SET FACTORY SETTINGS

If you have forgotten your PIN or want to revert the unit back to its factory settings please follow the below steps:

- Press and hold A for 3 seconds until the 1- 4 Red LED's flash enter PIN 4726
- LED's 9 and 10 will be lit
- Press 10 to perform a factory re-set
- Number LED's will scroll from 1 to 10 and then 10 to 1 and the unit will shutdown
- Please note the pin will have now been re-set to the default 10,10,10,10

OPTION SETTINGS

Several of the features of the unit can be turned On/Off by following the below steps

To enter option setup mode, unlock system first if locked

1. Press and hold 'A' for 3 seconds until number LED's 1-4 flash
2. Enter Pin code 4823 and all number LED's will scroll from 1 to 10
3. Use the number buttons to toggle the items listed below.
4. Press 'POWER' button briefly to save and quit.
5. All the number LED's will scroll down from 10 to 1;

		Default for Urban System
1.	Allow Auto sequencer with Airside System	(off)
2.	Enable light sensor	(on)
3.	N/A	(off)
4.	Enable low power standby mode	(on)
5.	Disable Variable Volume	(off)
6.	Enable Independent speaker channel volume levels	(off)
7.	Enable Fault Test mode – Amplifier and Speaker	(off)
8.	Enable Short Circuit Fault Test Mode (Beeps)	(off)
9.	Enable RF Control	(off)
10.	Airside Mode Enable	(off)

ERROR CODES / LED


This LED will indicate various codes to indicate if there is a problem.

An Error is shown by flashing a number on the LED; most error codes are displayed twice to make reading easier.

The LED will show a long flash (on for 0.5 seconds / off for 0.4 seconds) for 10's

The LED will show a short flash (on for 0.25 seconds / off for 0.4 seconds) for 1's

Therefore code 25 will be shown on the ERROR LED with the timings below:

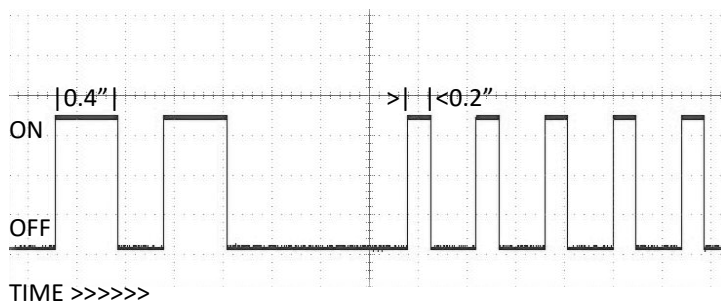

Page 15

Error codes displayed on the ERROR LED.

2	PIN ERROR	Wrong pin code entered or pin entry timeout
3	PIN ERROR	PIN already used for technical functions
4	N/A	
5	LOW BATTERY	Battery has fallen below 9.5V
6	ADPCM file error	Audio file format incorrect
7	ADPCM file error	Audio file format incorrect
8	Corrupt ADPCM file	Audio file is corrupt
9	Can't play ADPCM file	Audio file has other problem
10	N/A	
11	INIT file missing	
12	Defaults set from INIT file	
13	FLASH write error	Unable to update flash memory
14	RF not enabled	Attempting to setup RF module but not enabled in option
15	RF initialisation error	Unable to access RF module
26	BIRD can't play	Missing Bird audio file

TECHNICAL SUPPORT

Should you have any concerns about the installation or set up of your system, please contact either the agent from whom the purchase was made, or Scarecrow Bio-acoustic Systems direct as follows:

- Phone: 01825 766363
- Email: support@scarecrow.eu / sales@scarecrow.eu

If an item needs to be returned to the manufacturer, the Returns Address is:

Scarecrow Group Limited
The Old Dairy
Straight Half Mile
Maresfield
East Sussex
TN22 2HH